
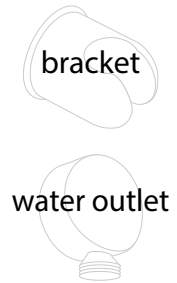



### Prior to Installation:

This item is recommended to be installed by a licensed plumber or professional only. Please ensure to observe all local and building code requirements. Shut off water supply prior to installation.


### Installation Instructions For Shower Set With:

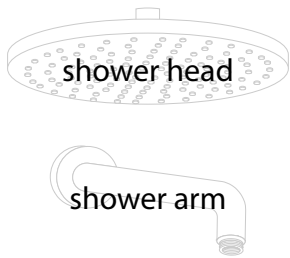

### Tools You May Need:




plumber's  
tape

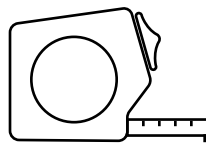


tape  
measure




allen  
wrench

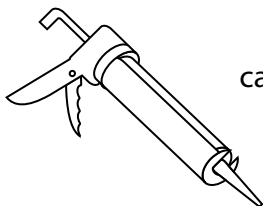


caulk

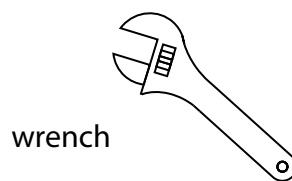

wrench

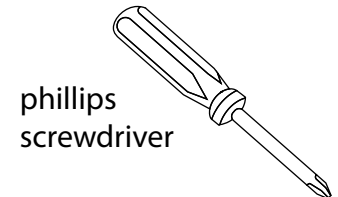

phillips  
screwdriver


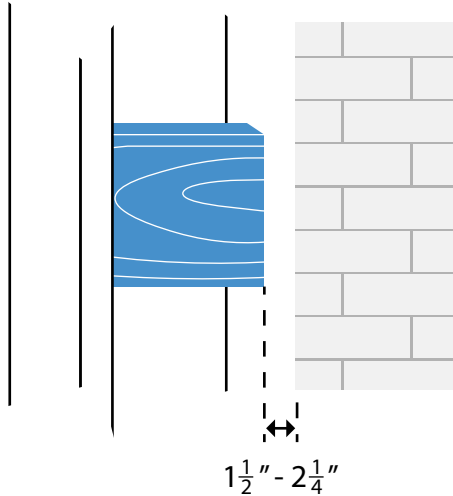


## 1. Prepare Location

Locate studs in the wall. Add wood blocking behind the finished wall where the mixer, shower arm, and water outlet will be placed. Total distance from finished wall should be between  $1\frac{1}{2}$ " and  $2\frac{1}{4}$ " for the valve.

## 2. Mount Valve

Rough-in valve mounts to internal pipes. Any further support needed can be manually done by a licensed plumber or professional.

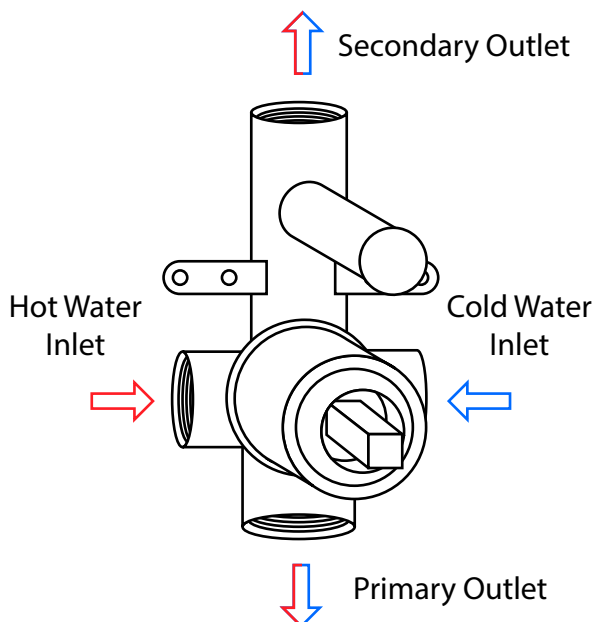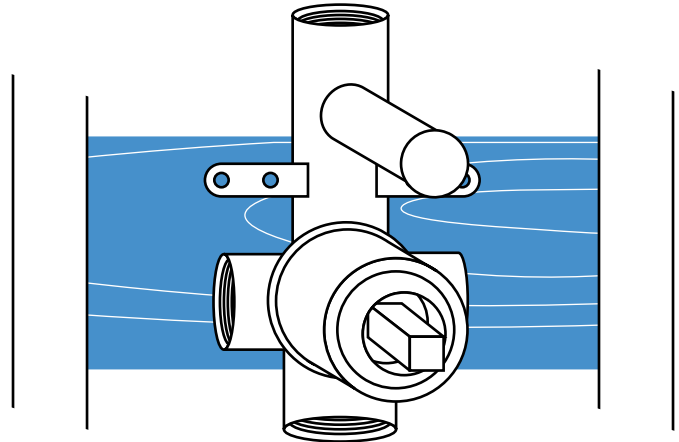



## 3. Connect Hot and Cold Water Lines

Connect the hot and cold water lines. The valve indicates which inlet is for each water temperature. Be sure to pressure test the fittings before finishing the wall.

## 4. Finish Wall

---

Close the wall and finish with desired exterior. Don't forget to measure and cut holes for valve, shower arm, and hand shower water connection if using acrylic panels.

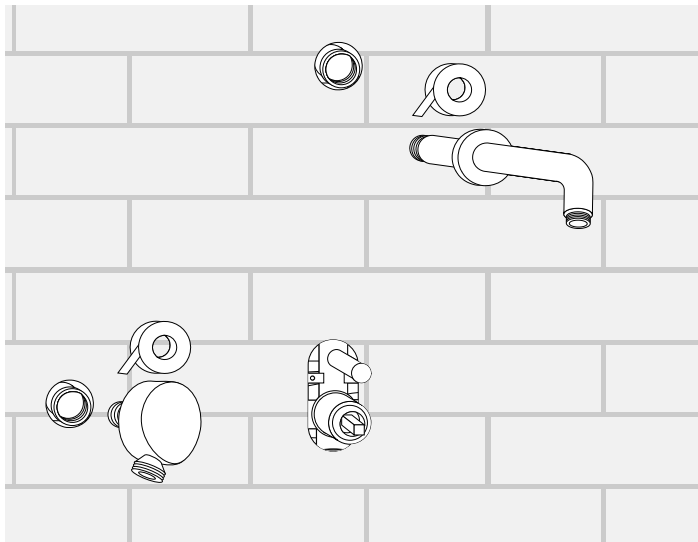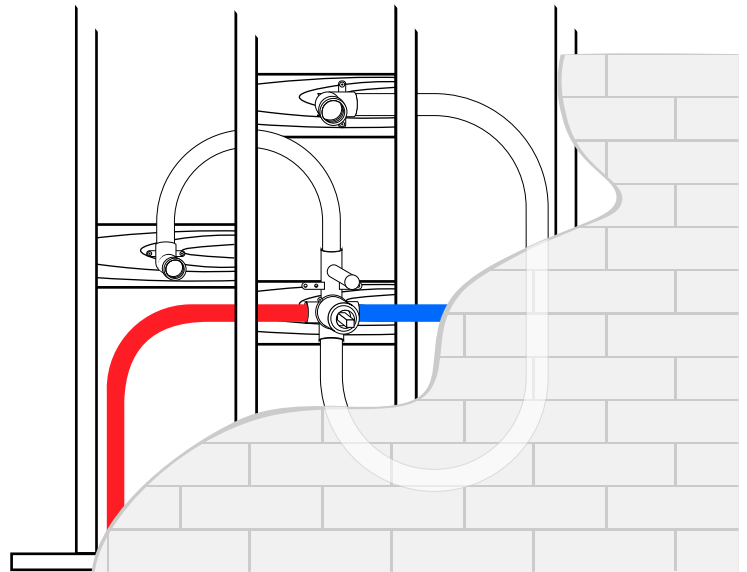

## 5. Install Shower Arm and Water Outlet


---

Slide on the shower arm plate and install arm with plumber's tape. Install water outlet with plumber's tape. **Be careful** not to cross thread pipe.

## 6. Install Cover Plate and Attach Handle

---


Install the cover plate with a bead of silicone. Attach the mixer handle to the valve. Secure firmly by tightening with allen wrench.

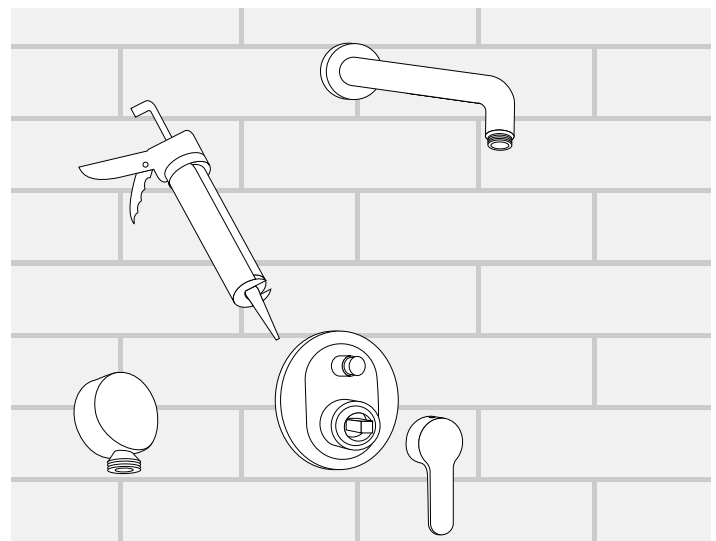

## 7. Attach Shower Head and Water Hose

---


Screw on shower head on to the shower arm with plumber's tape and tighten with wrench. **Be careful** not to cross thread pipe.

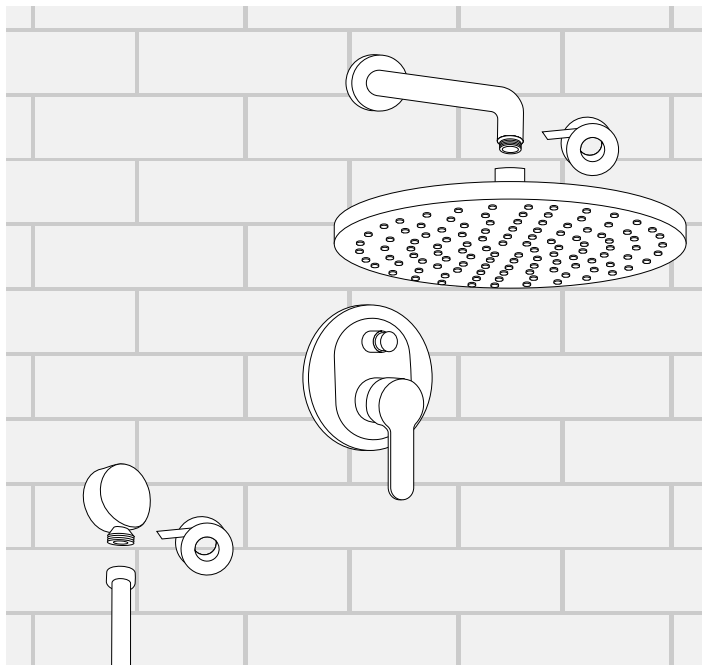

## 8. Install Hand Shower Bracket

---


Install hand shower bracket to the wall. Screw hand shower onto shower hose using plumber's tape. **Be careful** not to cross thread pipe.

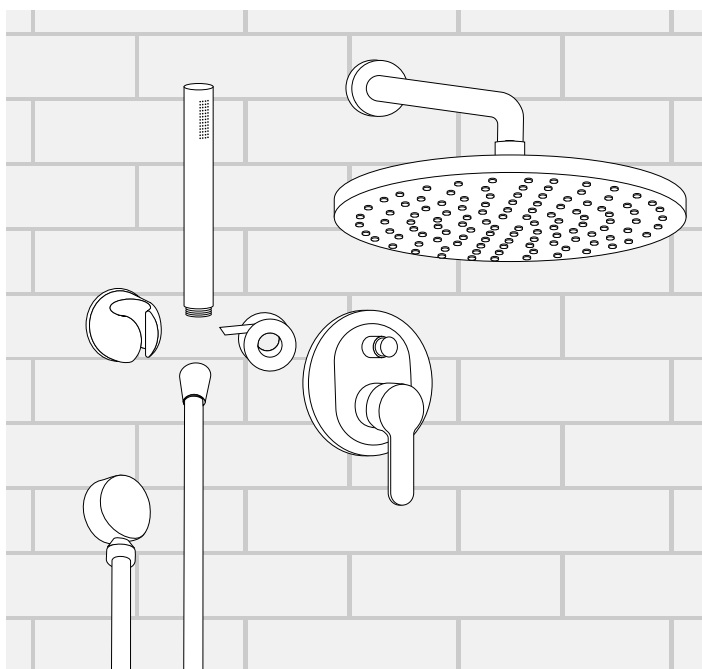


## 9. Shower Accessories

Complete your installation by adding the preferred shower accessories; shower basket, wire soap dish, and train rack.

shower basket



wire soap dish



train rack

